

**ZERO
BASE**



User manual

Table of content

Safety information.....	3
Placement in car.....	4
Product overview.....	5
Installation in the vehicle.....	6
Install AXKID ZERO on ZERO Base.....	8
Uninstallation.....	10
Care and maintenance.....	11
Warranty.....	12
Recycling.....	13

Safety information

Read this instruction manual before installing the AXKID ZERO Base in the vehicle.

AXKID ZERO Base is an isofix base that is part of Axxid's modular system. It can be used with:

AXKID ZERO infant car seat, for children of 40–87 cm and up to 13 kg.

This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use in i-Size compatible vehicle seating positions as indicated by vehicle manufacturers in the vehicle user's manual. If in doubt, consult either the Enhanced Child Restraint System manufacturer (www.axkid.com) or the retailer.



Warning: An incorrect installation may seriously affect the safety of the child.



Note: If you have any doubts, contact the retailer where the car seat was purchased or contact info@axkid.com


To maximize your child's safety, it is important that you keep the following in mind:

- For the latest version of the instruction manual, visit <https://axkid.com/manuals>.
- Always refer to the vehicle manufacturer's manual as well as this instruction manual when installing this child restraint.
- Ensure that the car seat is installed in a way where no parts become trapped by movable seats, car doors, etc.
- Do not use the car seat in a seating position where an active frontal airbag is fitted. To install the car seat in this location the airbag must be switched off according to the vehicle manufacturer's instructions.
- Never leave the child unattended in the child car seat nor inside the vehicle.
- Do not attempt to disassemble or modify any part of the child restraint device. The warranty and the safety performance of the car seat could be affected by doing so.
- Do not alter the routing of the vehicle seat belt. Follow the seat belt routing instructions in this manual.
- In case of an accident, the car seat should always be replaced. It may have damage that is not visible and could seriously affect the safety of the child.
- When used with the AXKID ZERO infant car seat: Never use the car seat without the textile cover. The textile cover is a safety feature and may only be replaced with an Axxid original seat textile cover.
- Ensure that any luggage or loose objects are secured in the vehicle as they may cause injuries to passengers in the event of an accident.
- Protect the car seat from prolonged direct sunlight to avoid surface overheating that could burn the child.
- If the car seat has been exposed to direct sunlight, make sure the car seat is not too hot before securing the child.
- Make sure that the harness is properly fitted to the child's body, and that the harness straps are not twisted.
- Make sure there is no twist in the seat belt.
- Axxid recommends to always use a seat protection to protect the vehicle seat from scratches and dirt.
- Read the vehicle handbook and the vehicle list at www.axkid.com to find which seating positions are suitable for this car seat.

Placement in car

AXKID ZERO Base must be installed using ISOFIX attachment points. It is approved for use in all i-Size approved seating positions but may also fit in other non i-Size approved ISOFIX seating positions. Before installing the seat base, ensure that your vehicle is fitted with ISOFIX attachment points.

Check the vehicle instruction manual and the vehicle list on <https://axkid.com/manuals> to find suitable seating positions.

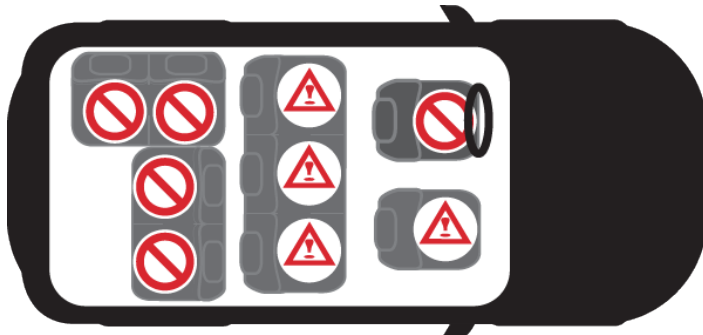

Front passenger seat with ISOFIX (no active airbag)	YES/NO*
Front passenger seat with ISOFIX (active airbag)	NO**
Rear passenger seat with ISOFIX	YES
Seats without ISOFIX	NO
Side-facing and rear-facing seats	NO

*The General Regulation of Traffic in Spain, in its article 117, establishes the prohibition of driving with children of stature equal to or less than 135 centimetres located in the front seats of the vehicle, without exceptions.




Important: ** If you wish to install the AXKID ZERO Base in a location where a frontal airbag is fitted, the airbag must be deactivated according to your vehicle manufacturer's instructions. Note that some vehicles require an authorized service center to disconnect the airbag. Always check the vehicle's airbag indicator light to make sure that the airbag is deactivated.



Never install a child restraint in a passenger seat where an active airbag is fitted.



Product overview

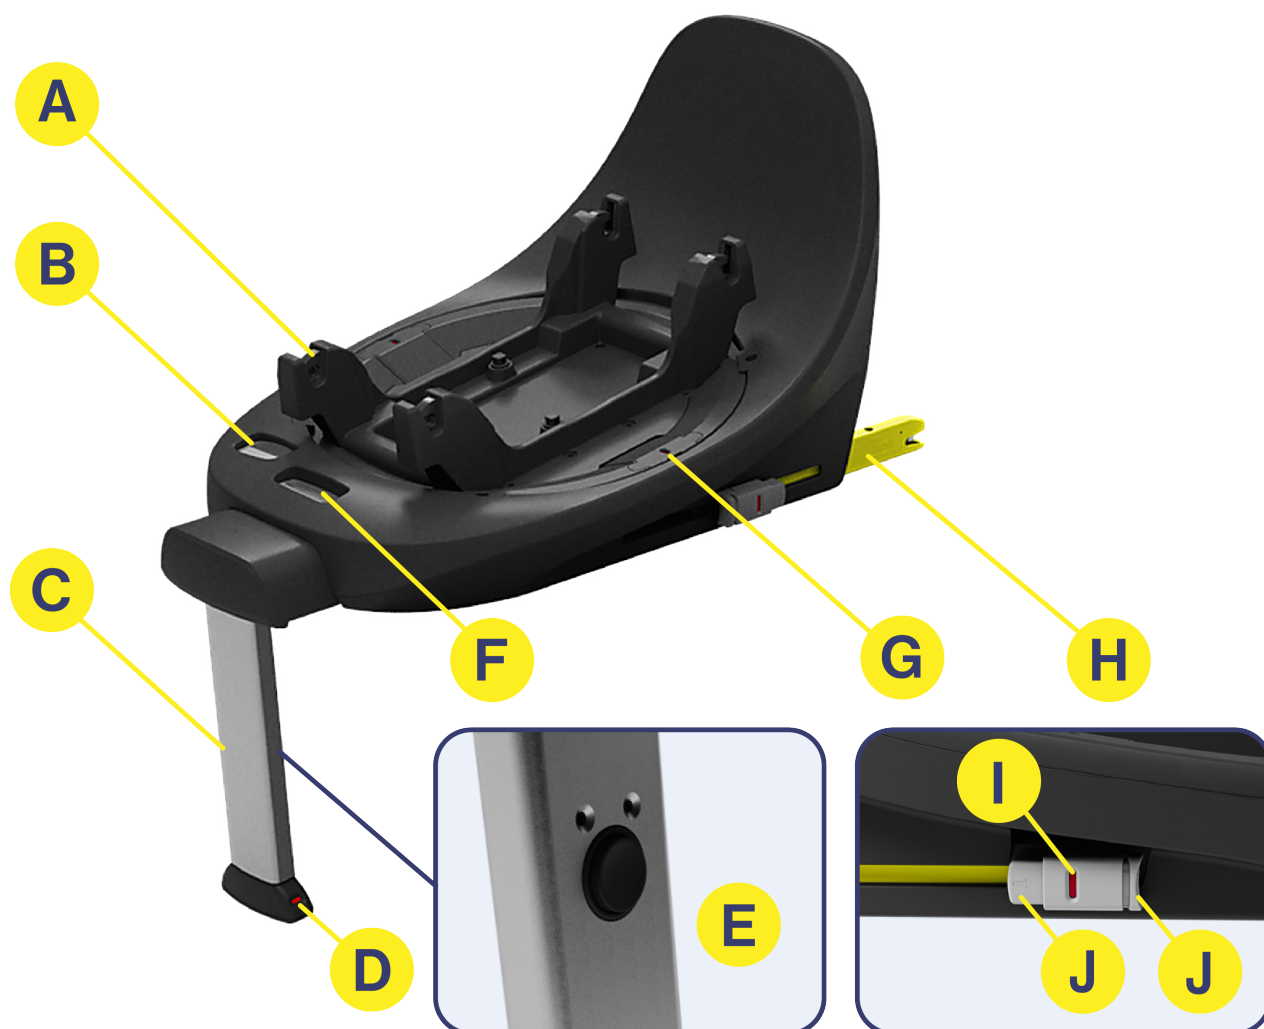

(A) Car seat attachments

(B) Car seat release button

(C) Support leg

(D) Support leg floor contact indicator

(E) Support leg adjustment button

(F) Rotation handle

(G) Car seat installation indicator


(H) ISOFIX connector

(I) ISOFIX locking indicators

(J) ISOFIX adjustment buttons

Installation in the vehicle

1 Prepare the seat base for installation

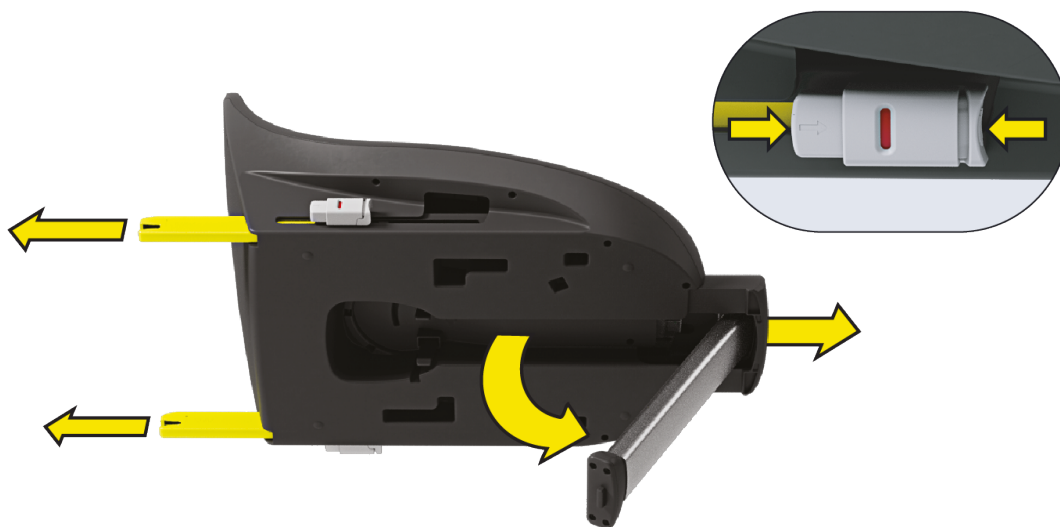

Unfold the support leg (C) partially, to about 45°.

Press and hold the ISOFIX adjustment buttons (J) and extend the ISOFIX connectors (H) completely.

After extending the ISOFIX connectors, unfold the support leg (C) fully.


2 Connect to the ISOFIX attachment points



Place the AXKID ZERO Base on the vehicle seat. Push the ISOFIX connectors (H) against the vehicle's ISOFIX attachment points until you hear a clicking sound on both sides. Ensure that the ISOFIX locking indicators (I) show green, indicating that the ISOFIX is properly connected.

Once the ISOFIX is properly connected, push the AXKID ZERO Base towards the vehicle seat backrest until it rests firmly against the backrest.

3 Extend the support leg

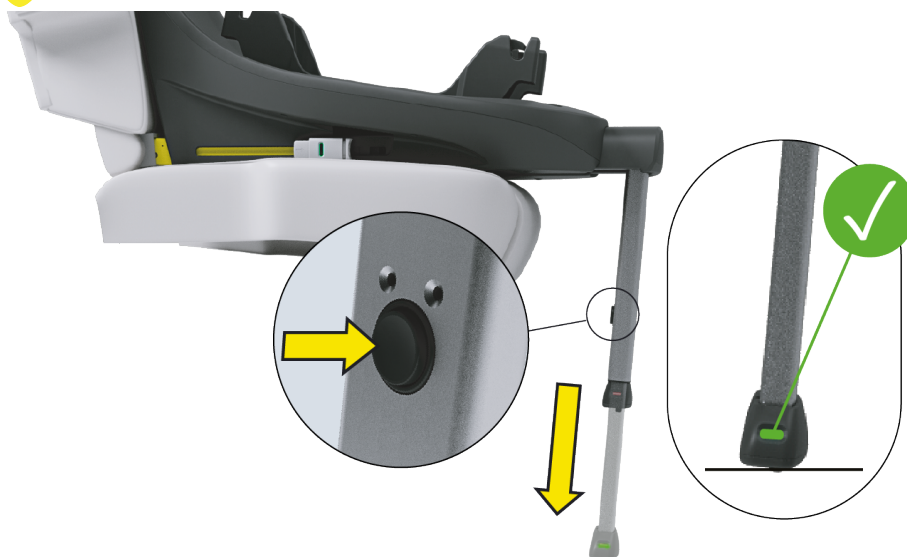

Push the support leg adjustment button (E) until it makes firm contact with the vehicle floor and the support leg floor contact indicator (D) is green.

Install AXKID ZERO on ZERO Base



Note: See the AXKID ZERO Infant car seat user manual for full installation instructions and important information on how to use the product and secure your child in the AXKID ZERO Infant car seat.

4

Install infant car seat on base




Place the infant car seat on the seat base and push down until the car seat attachments (A) of the base are fully engaged.

After a correct installation, the car seat installation indicators (G) on both sides of the seat base will display green. Lift the infant car seat to check that the installation is secure.

5

Adjust the handle

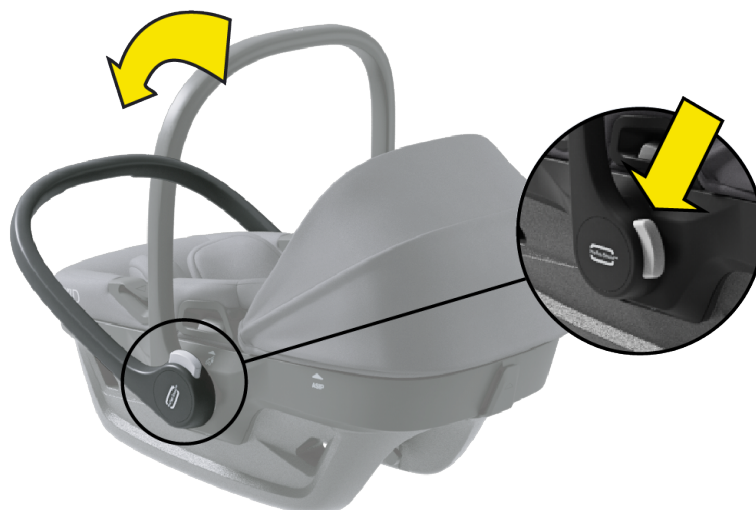

Press the handle buttons on each side and adjust the handle to in vehicle position.

6

Attach the ASIP pad



Attach the ASIP pad to the side of the infant car seat that is closest to the car door.

Uninstallation

1. Push the support leg adjustment button (E) and raise the lower part of the support leg.
2. Release the ISOFIX connectors (H) by pushing both ISOFIX adjustment buttons (J) and retracting the ISOFIX connectors (H).
3. Remove the seat base from the vehicle.

Care and maintenance

- Any plastic parts of the Axxkid seat base can be cleaned with mild detergent and water. Do not use aggressive chemicals containing solvents or similar, as this can cause damage to the plastic and compromise the safety of the seat base.
- Do not make any modifications or alterations to the Axxkid seat base other than those described in this instruction manual.
- Any repairs must be carried out by the manufacturer or agent.
- Handle the seat base with care and clean it regularly for maximum durability.
- Regularly check the seat base for damage. If there are any abnormalities, contact the retailer where it was purchased or reach out to Axxkid directly.
- Avoid exposing the seat base to direct sunlight.

Warranty

The Axkid seat base is covered by a 24 month warranty from the date of purchase. Bring the receipt to the place of purchase in case of warranty claims.

The warranty does not cover

- Normal wear and tear.
- Damage due to incorrect use, neglect, or accident.
- If repairs have been carried out by a third party.
- All materials used have a very high UV resistance rating. However, UV light is very aggressive and will eventually cause the seat cover to fade, which is considered normal wear and tear.

Recycling

Axkid strongly recommends recycling of old car seats. Before leaving the car seat at the local recycling station, cut off any harness straps from the seat, remove the textile cover, remove as many Styrofoam parts as possible, separate metal and plastic parts if possible. The main part of the car seat should be marked unsafe or expired (use a marker) to deter anyone from using it again. Please follow the local municipal guidelines for recycling instructions for the different materials.

